


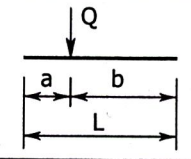
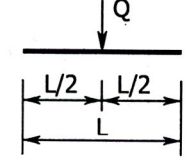
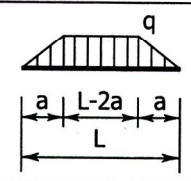
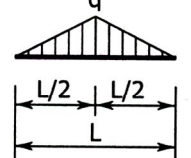
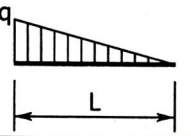
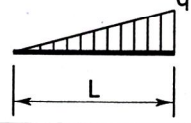


DOĞRU EKSENLİ PRİZMATİK (EI:SABİT) ÇUBUKLARDA
ANKASTRELİK MOMENTLERİ

Yükleme			
	M_{ij}	M_{ji}	\bar{M}_{ij}
	$+\frac{qL^2}{12}$	$-\frac{qL^2}{12}$	$+\frac{qL^2}{8}$
	$+\frac{Qab^2}{L^2}$	$-\frac{Qa^2b}{L^2}$	$+\frac{Qab}{2L^2}(L+b)$
	$+\frac{QL}{8}$	$-\frac{QL}{8}$	$+\frac{3QL}{16}$
	$+\frac{qL^2}{12}\left[1-\frac{a^2}{L^2}\left(2-\frac{a}{L}\right)\right]$	$-\frac{qL^2}{12}\left[1-\frac{a^2}{L^2}\left(2-\frac{a}{L}\right)\right]$	$+\frac{qL^2}{8}\left[1-\frac{a^2}{L^2}\left(2-\frac{a}{L}\right)\right]$
	$+\frac{5qL^2}{96}$	$-\frac{5qL^2}{96}$	$+\frac{5qL^2}{64}$
	$+\frac{qL^2}{20}$	$-\frac{qL^2}{30}$	$+\frac{qL^2}{15}$
	$+\frac{qL^2}{30}$	$-\frac{qL^2}{20}$	$+\frac{7qL^2}{120}$